## Recalibrating Litter-Robot 4 **DFILasers**

A recent firmware update allows Litter-Robot 4 customers to recalibrate the unit's drawer full indicator (DFI) lasers, resulting in more accurate waste drawer readings.



How to install







 How to update your firmware: In the Whisker app, select your Litter-Robot 4 unit from the dashboard. Tap on Controls in the bottom right corner. Scroll to Tap on contrasts in the bootsmirght corner, sortiol to the bottom of the page and tap the Robot Information panel. If you see the option to "Update Firmware" on the Robot Information page, do so. If you don't see the option, then you already have the latest firmware update.



Press the Power button () to turn 0 Litter-Robot 4 OFF. Do not unplug the unit.



٥ Remove the waste drawer and waste drawer liner. Wipe the drawer clean of debris



Add a plece of plain white paper to the bottom of the drawer (ex. half a sheet of printer paper, a bathroom tissue, napkin, or paper towel).



Insert the waste drawer again. (Do not add a waste drawer liner yet.)



ØP

s the but

one at a time,

within 5 seco

of each other.

- 🖸 Pr s the control pa buttons in this order:
  - > Connect button 奈
  - > Reset button @ > Connect button 奈
  - > Empty button 우
  - > Cycle button 🔿



0 If the c pressed, the unit will remain OFF. Walt 5 seconds and repeat Step 6.



ed, the unit will perform a lamp If correctly p test (the LED display illuminating red, green, and blue lights) then begin to cycle to the dump position (Illuminating a round robin green light). During calibration, the LED display will illuminate 3 solid yellow and 2 flashing green lights.



If the calibration is successful, the LED display will illuminate 3 solid yellow and 2 flashing blue lights for 5 seconds. Then the unit will cycle home. You can now remove the white paper from the waste drawer, add a new waste drawer liner, and resume use



If the calibration fails, the LED display will Illuminate 3 solid yellow and 2 flashing red lights for 5 seconds. Then the unit will cycle home. Contact Whisker Customer Experience at whiskersupport.com.